Mini POS L3700 Quick Setup Guide


CONTENTS CHECKLIST

Please check the components after unpacking. If any one of them is missing, or if there is a page missing from the product manual, etc., please contact the dealer.


Name	Qty.
A3700 — Tablet	1
B3700 — Printer base	1
USB-C Power adapter	1
Type-C to Type-A cable	1
Printing paper	1
Swivel base (with screw kit)	1
Screwdriver	1

Product Description


Front View

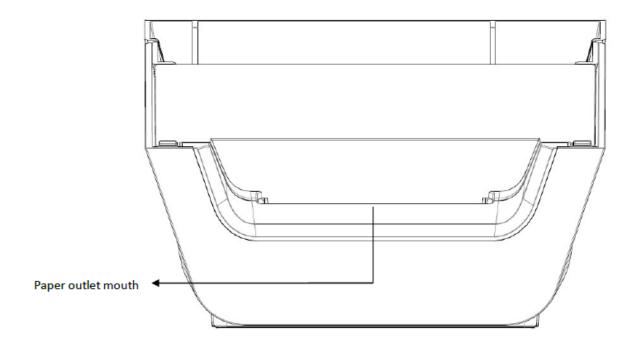


Back View

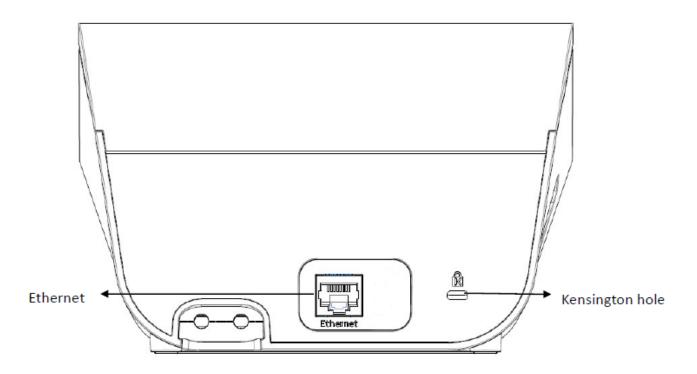


Top View

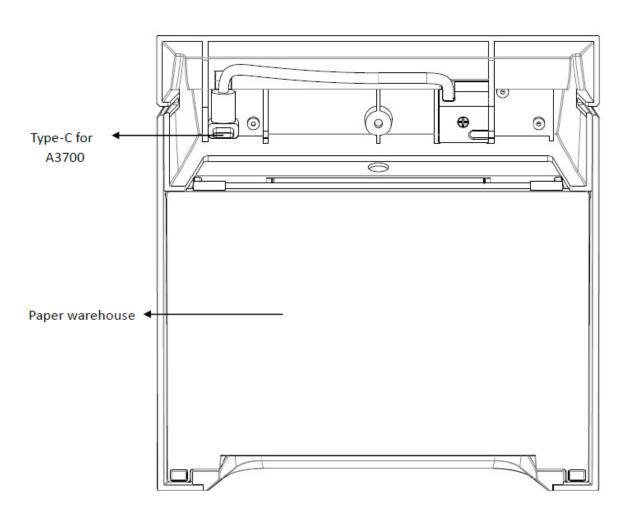

Bottom View

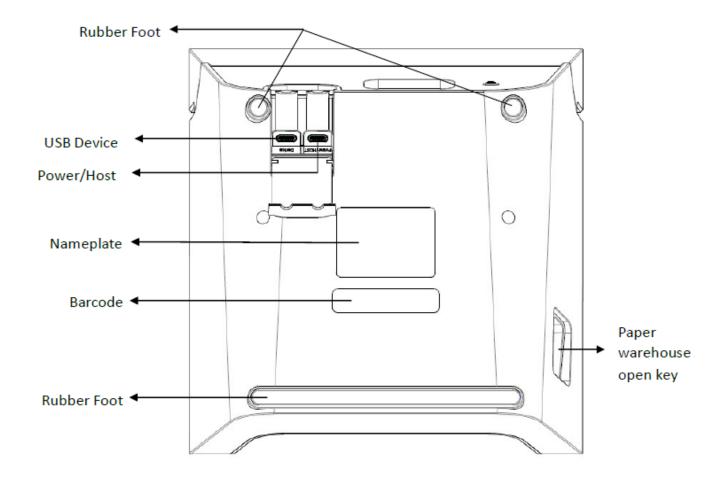

The matching diagram for A3700 host and B3700 printer base is as follows:

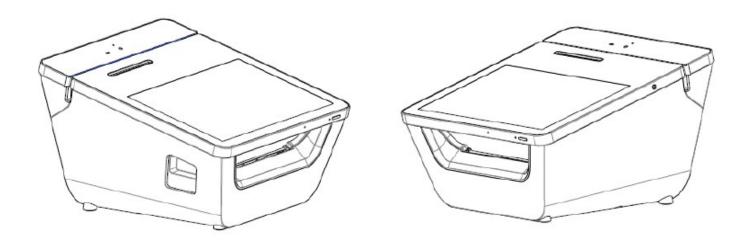

Installation

1□Open the cover plate at the bottom of the device.

2□Connect the base's Power Port with the Power Adapter.

 $3\square 0$ ptional: Connect the base's USB devices port with the cash register's USB host port.


4□Close the cover plate at the bottom of the device.


5□Optional: According to the requirements, connect the base's Ethernet port with the gateway device, such as router, LAN switch.

 $6\square Press$ the paper loader button on the left side of the device to open the printer and install the printer paper.

7□Place the base on a stable flat surface to complete the base installation.

 $8\square If$ the rotating base accessory is optional, please install it according to the steps shown in the following figure.

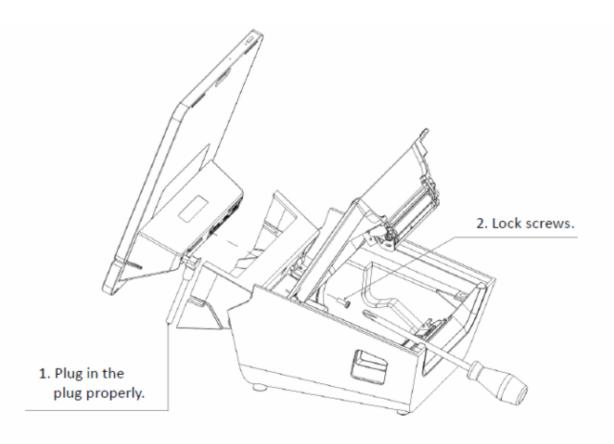

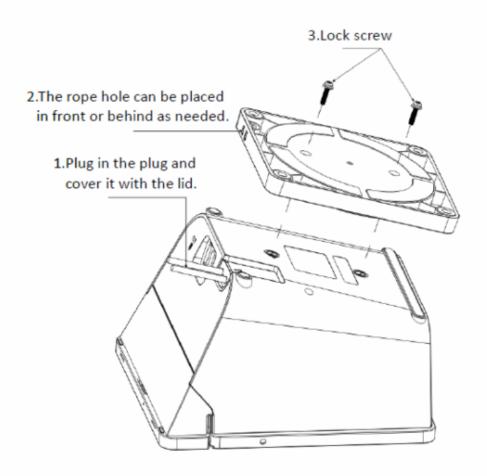

Specifications

Printer: 3-inch, thermal sensitive, automatic paper cutting, 200mm/s+, 80mm paper roll.

Ethernet□10/100Mbps adaptive network port □Ethernet can be shared with the upper computer A3700.

Type-A USB Port: USB2.0 HOST [This interface is optional[Default without]].

Type-C USB Port: USB2.0 Device ☐This interface can connect to ECR☐.

Type-C USB Port: USB Power and USB host□This USB interface can be extended to T3400 hub□.

USB Power supply: DC 20V/3.25A (max).

Working Environment: -10°C~45°C; R.H.: 10%~93%(non-condense) Storage Environment: -20°C~70°C; R.H.: 10%~93%(non-condense)

Terminal Installation and Usage Tips

1⊡Do not damage electric wire and power adapter. If electric wire or power adapter is damaged, please stop using the terminal.

2 Before power adapter is plugged into the power socket, please make sure that the voltage the power outlet supplies is appropriate working voltage for the terminal. 3 Do not expose the terminal to sunlight, or to a humid, hot, or dusty environment 4 Keep the terminal away from liquids.

5□Do not plug any unknown material into any port of the terminal, since it may create serious damage to the terminal.

6□If the terminal is defective, please contact professional POS repair technicians.

7⊓Do not assemble the terminal in a hazardous area.