 


#### 4.2 Smart Card Reader

Insert the card fully into the reader with the metallic contacts facing up and towards the device. Make sure that the card is fully inserted into the card reader while scanning the card.

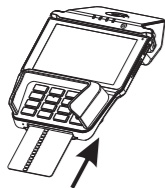

#### 4.3 Contactless Card Reader

The contactless card reader reads cards and devices placed roughly within an inch (2.5 mm). For best results, place as close to the reader as possible and center the card over the indicated area at the back of the terminal.



5

#### Environment

Working Environment : Temperature: -10°C~50°C(14°F~122°F)  
Humidity: 5%~95%(non-condense)

Storage Environment : Temperature: -20°C~70°C(-4°F~158°F)  
Humidity: 5%~95%(non-condense)

#### Cleaning the Device

6

- Do not use industrial strength or abrasive cleaner as it may damage or scratch the screen.
- Do not immerse the device in water or liquid.
- Do not spray water or cleaner into EMV Card Reader or ports.
- To clean the screen, apply distilled water or mild glass cleaner onto a soft, lint-free cloth and gently wipe terminal.

#### Terminal Installation and Usage Tips







7

- 1) If any cables become damaged, seek a replacement.
- 2) Before inserting card, please check the inside and periphery of the IC card slot. If there is any suspicious object, please report to the related administrator.
- 3) Do not insert unknown materials into any port on the A30, this may cause serious damage.
- 4) If repairs are required, please contact a professional technician instead of attempting them on your own.
- 5) Avoid exposing the device to an excessively hot, dusty, or strong electromagnetic environment.
- 6) Do not vibrate, shake, or drop the device.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Icon Key

8

-  Do not throw away; Recycle only.
-  Class II Equipment
-  For indoor use only
-  Energy Efficiency Marking
-  AC voltage
-  DC voltage

#### FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FCC WARNING

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the body of this equipment is a label that contains, among other information, a product identifier. If requested, this number must be provided to the telephone company.

 
#### RF Exposure Information

This device meets the government's requirement for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

#### PAX Customer Support

For questions or help with the terminal installation please contact your service provider or PAX customer support.

## A30 Smart Payment Terminal

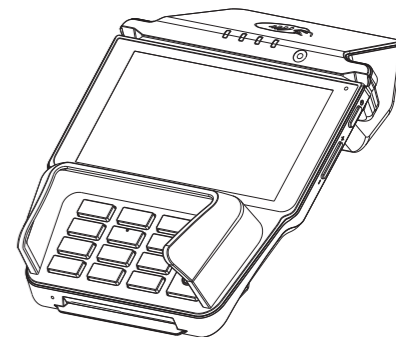

Note: Product images shown may be different than actual product received

PAX TECHNOLOGY INC.



### Contents Checklist

 
1

Please check the components after unpacking. If any are missing, or if there is a page missing from the product manual, etc., please contact the dealer.

Name	Qty
A30 Smart Payment Terminal	1
USB Cable	1
Quick Setup Guide	1
Powered USB Cable (Optional)	1
AC Power Cable (Optional)	1
Adapter (Optional)	1


### Product Description

2

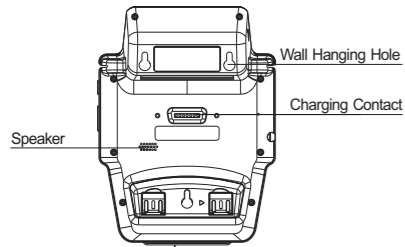


Bottom View

 1

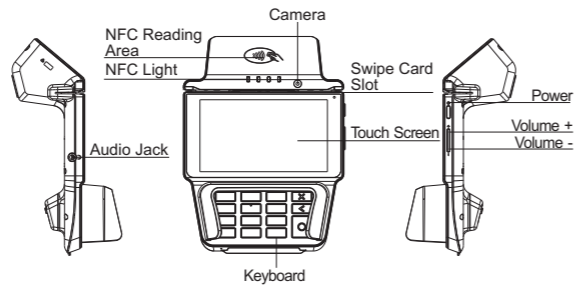

Front View

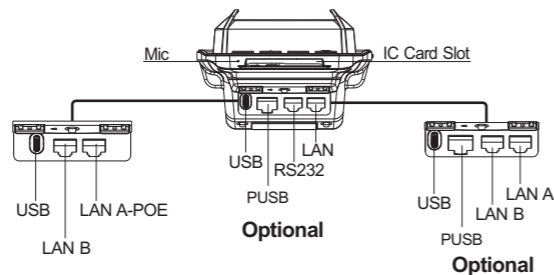 

Optional

Default

Top View

2



### Instructions

3

The following sections cover basic operating instructions.

#### 3.1 Power ON/OFF

##### POWER ON:

 
Plug the terminal into an electric outlet; the terminal will power on automatically.

##### POWER OFF:

Press and hold the power button down for 3 to 5 seconds and then release.

#### 3.2 SAM/SD Card Installation

The A30 has one SAM card slot on the main body of the device and one SD card slot. These card slots are normally hidden under the back cover. In order to install a SD or SAM card into any of these slots, insert a card into the card slot with the contacts facing upwards and the clipped corner of the card facing forward and to the right.

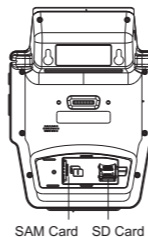


SAM Card SD Card

3

- 1) Unscrew the back cover.
- 2) Push the cover to the right.
- 3) Insert SAM /Micro-SD card into the appropriate card slot and replace cover.

#### 3.3 Stand Installation

 The following instructions cover A30 stand installation.

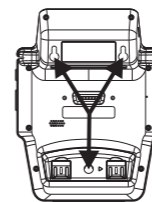

- 1) Align and insert metal stand prongs into the stand slots (3) on underside of terminal.
- 2) Slide terminal firmly into place on stand.


#### Card Readers

 4

The A30 comes with a Magnetic Stripe Reader, a Smart Card Reader, and a Contactless Card Reader.

#### 4.1 Magnetic Stripe Card

Slide the card through the card reader slot from left to right or from right to left with the magnetic strip oriented towards the body of the device. Make sure that the card is fully inserted into the card reader while swiping the card.

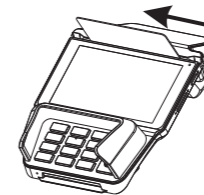

4

*This document is provided to you for informational purposes only. All features and specifications are subject to change without notice. PAX's name and PAX's logo are registered trademarks of PAX Technology Inc. All rights reserved.*



Responsible Party:  
PAX Technology, Inc.  
8880 Freedom Crossing Trail  
Building 400, 3rd Floor, Suite 300  
Jacksonville, FL 32256, USA  
Help Desk  
1-877-859-0099  
www.pax.us