


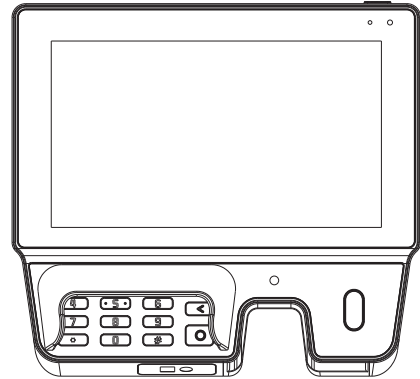


Aries6 Smart Tablet




Box Contents

1

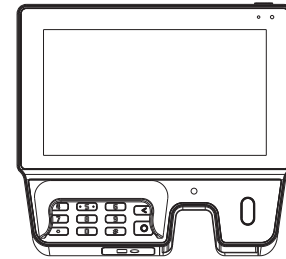


Power Adapter

 

USB Cable



 SIM Card Ejector Tool




Privacy Shield

- 1 – Aries6 Smart Tablet
- 1 – Power adapter
- 1 – USB cable
- 1 – SIM card ejector tool
- 1 – Privacy shield set
- 1 – Battery
- 1 – Quick Setup Guide

Product Description


2

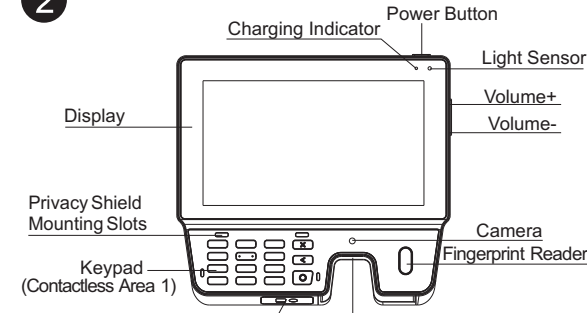

Front View



 
Left Side View




Right Side View

- Charging Indicator
- Power Button
- Light Sensor
- Volume+
- Volume-
- Display
- Privacy Shield Mounting Slots
- Keypad (Contactless Area 1)
- Camera
- Fingerprint Reader
- 1D/2D Code Scanner
- Hybrid Card Reader

 
- PSAM Card Slot
- SIM+SD Card Slot
- Volume+/-
- USB Type C Port Cover
- Audio Port



Bottom View

 


Top View

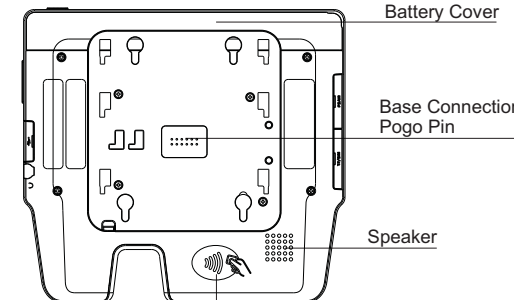


Underside View

- 1D/2D Code scanner
- Hybrid Card Slot
- Power Button
- Battery Cover
- Base Connection Pogo Pin
- Speaker
- Contactless Area 2

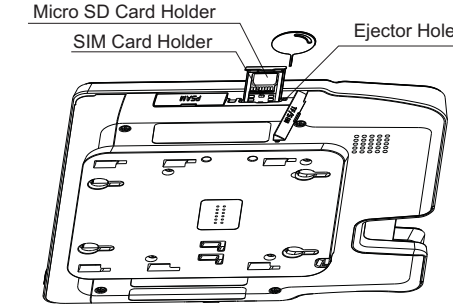

Card Slot View

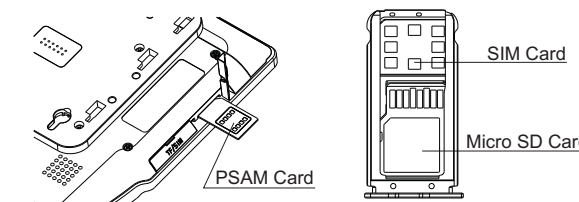

- Micro SD Card Holder
- SIM Card Holder
- Ejector Hole
- PSAM Card
- SIM Card
- Micro SD Card

Note: Product images shown may be different than actual product received.

This document is provided to you for informational purposes only. All features and specifications are subject to change without notice. PAX's name and PAX's logo are registered trademarks of PAX Technology Inc. All rights reserved. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by PAX Technology, Inc. is under license. Other trademarks and trade names are those of their respective owners.



Responsible Party:
 PAX Technology, Inc.
 8880 Freedom Crossing Trail
 Building 400, 3rd Floor, Suite 300
 Jacksonville, FL 32256, USA
 Help Desk
 1-877-859-0099
 www.pax.us

3 Power

Power on: Press and hold the power button for three seconds until screen display lights up and tablet powers up. See page 2 (Front View) for the location of the power button.

Power off: Press and hold the power button for three seconds. Select "Power off".

Charge: Plug USB cable into USB port (see page 2, Right Side View for the location of the USB port) or place the tablet onto its base to charge the tablet.

Charging indicator: Charging indicator light displays charging status:

- Red indicator – Tablet is charging.
- Green indicator – Charging is complete.
- Red and green indicators flashing alternately – Charging problem. (See page 2 Front View for the location of the Charging indicator.)

4 Card Readers

Magnetic stripe card: Insert magnetic stripe card into card slot and push to the end with magnetic stripe facing down, then pull out card at a constant speed to swipe card.

Smart card: Insert card with IC chip facing up, then push it to the end of the card slot. Leave card inserted until prompted to remove.

Contactless card: When prompted, hold contactless card over center of contactless area. See page 2 (Front View) and page 3 (Underside View) for the locations of the contactless areas.

5 SAM Card

1. To insert SAM card, open SAM card slot and insert card with chip facing up (see page 4). Close SAM card slot cover.
2. To remove SAM card, first push it further into slot. (The card will then stick out of the slot a little.) Next push card again to remove it.


6 SIM/Micro SD Card

1. Open tray cover and insert SIM card ejector tool into hole at side of card tray until tray opens.
2. Take tray out and put the SIM/Micro SD card on the tray in the direction shown on page 4.
3. Gently push tray back into slot until firmly seated.


7 Battery

Remove Battery

1. Remove the adapter on the underside of the tablet by removing the 4 screws as shown.

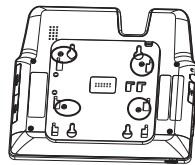

2. Unclench the battery cover from the shown corner and remove battery

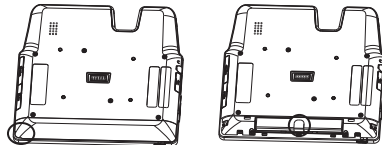

Install Battery

1. Put back battery and the cover back and secure them.
2. Put back adapter and lock the screws.

 
8 Privacy Shield

Caution: While the installation of a privacy shield is not required, they do offer additional protection.

Please Note: Once installed, the higher privacy shield will be fixed and cannot be removed, while the lower privacy shield can be removed.



Low Privacy Shield



High Privacy Shield

1. Align the four pegs on the privacy shield with the four mounting slots around the keypad.
2. Press the privacy shield firmly to secure it into place.

9 Specifications

Operating System: Android 7.1

CPU: Quad-Core Cortex A53, 1.8GHz

Memory: 1 GB RAM + 8GB Flash

Display: 6-inch, Resolution 720 x 1280 pixels, multi-touch capacitive screen, supports stylus pen

Audio: Built-in speaker, supports headphone output

Camera: Front camera, 2-megapixels with flash, fix focus, high-speed code scanning

Light sensor: Main display automatically adjusts backlight brightness

Wireless communication: Supports Wi-Fi, *Bluetooth*® wireless technology, 3G/4G (optional)

Positioning: Supports GPS, Compass, Galileo, GLONASS Card slots:

1 SAM card slots

Micro SD card slot (supports maximum of 128GB)

Magnetic stripe card/IC card slot, 2-in-1, supports MAG&ICC

Magnetic card reader: Supports Track 1/2/3

IC card reader: Complies with ISO7816 standards, EMV2000 L1 & L2, PBOC3.0

Contactless card reader: Compatible with ISO 14443 Type A&B

10 Device Location

Locate the device on a counter top, desktop or table top. Keep the device away from direct sunlight, excessive dust, moisture, and heat. Avoid locating the device near electrical devices that might introduce interference such as microwave ovens and blow dryers.

11 Cleaning the Device



WARNING:

- Do not use industrial strength or abrasive cleaner as it may damage or scratch the screen.
- Do not immerse tablet in water (or liquid).
- Do not spray water or cleaner into card reader or ports.
- To clean screen, apply distilled water or mild glass cleaner onto a soft, lint-free cloth and gently wipe screen.
- To clean tablet, apply distilled water or plastic-safe cleaner onto a soft, lint-free cloth and gently wipe tablet.

12 Installation and Usage Tips

- Base functionality is not available while the device is connected to a computer or when it is being charged using a Type C plug.
- Use the included USB cable with power adapter to charge the device, otherwise the device may not operate normally.
- Avoid exposing the device to an excessively hot, humid, dusty, or strong electromagnetic environment.
- Do not vibrate, shake, or drop the device.
- Do not insert or unplug any part of the device while it is powered on. This may cause damage to an internal circuit.
- Please contact PAX technical support for assistance with the device.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.